



# CERTIFICATE OF VOLATILITY

Date: 19 January 2018

Model/Part No. SyncServer Model S600 P/N 090-15200-60X  
SyncServer Model S650 P/N 090-15200-65X  
SyncServer Model S650i P/N 090-15200-65X

Description Ultra Precise & Versatile GPS Network Time Server

This certification defines volatile and non-volatile memory devices for use by End Users in clearing memory device data for security purposes.

Note: These devices are installed on the Main Board.

<u>Memory Size</u>	<u>Memory Type</u>	<u>Volatile/Non-Volatile</u>	<u>User Data</u>	<u>Location</u>
1 G byte	RAM	Volatile	Yes	U37, U38
	Microsemi P/N 148-01672-000 Mfg P/N: Micron MT41K256M16HA-125IT:E Description: IC Memory SDRAM 4Gbit DDR3 256Mx16			
Function:	Application data during operation			
Clearing Process:	Remove power from unit			
4 G byte	Flash	Non-Volatile	Yes	U18
	Microsemi P/N 148-01890-000 Mfg P/N: Kingston P/N EMMC04G-S100-G08U Description: IC Memory Flash 4G eMMC			
Function:	Software image, user setting such as configuration logs, message logs and event logs			
Clearing Process:	Reset to factory defaults to clear any user configurations and logs. To restore to Factory Defaults: <ul style="list-style-type: none"> <li>• Press MENU</li> <li>• Then press 3 (Sys Control)</li> <li>• Then press 2 (Factory Default)</li> <li>• Then press ENTER (to confirm)</li> </ul>			
640k bytes	RAM	Volatile	Yes	U20
110k logic elements	RAM	Volatile	No	U20
	Microsemi P/N 148-01670-000 Mfg P/N: Altera 5CSXFC6D6F31I7N Description: IC FPGA Cyclone V SoC			
Function:	Cache memory for processor. FPGA logic fabric.			
Clearing Process:	Remove power from unit			



# Microsemi Frequency & Time Corporation



3870 North First Street  
 San Jose, CA 95134  
 USA  
 (800) 713-4113  
 www.microsemi.com

N/A	Flash	Non-Volatile	No	U52
-----	-------	--------------	----	-----

Microsemi P/N 148-01684-000  
 Mfg P/N: Microsemi ZL30251LDG1  
 Description: IC Clock Synthesizer  
 Function: Controls operation of clock synthesizer  
 Clearing Process: No erase function. Contains no user data

N/A	Flash	Non-Volatile	No	U10
-----	-------	--------------	----	-----

Microsemi P/N 148-01690-000  
 Mfg P/N : TI UCD9090RGZT  
 Description: Power supply sequencer  
 Function: Controls sequencing of power supplies  
 Clearing Process: No erase function. Contains no user data

N/A	RAM/Registers	Volatile	No	U16, U25
-----	---------------	----------	----	----------

Microsemi P/N 148-01708-000  
 Mfg P/N: Microsemi VSC8552XKS-04  
 Description: : IC Dual Ethernet PHY  
 Function: Control operation of 100/1000 Ethernet PHY  
 Clearing Process: Remove power from unit

**Note: These devices are installed on the VFD Display.**

N/A	RAM	Volatile	No	VFD
N/A	Flash/ROM	Non-Volatile	No	VFD

Microsemi P/N 100-00753-000  
 Mfg P/N: Noritake GU160X32D-7000-N12  
 Description: VFD Display Module  
 Function: Used to format information on the display  
 Clearing Process: Remove power from unit. Contains no user data.

**Note: These devices are installed on the Timing I/O Board.**

N/A	Flash	Non-Volatile	No	U54
-----	-------	--------------	----	-----

Microsemi P/N 148-01684-000  
 Mfg P/N: Microsemi ZL30251LDG1  
 Description: IC Clock Synthesizer  
 Function: Controls operation of clock synthesizer  
 Clearing Process: No erase function. Contains no user data

N/A	Flash	Non-Volatile	No	U34
-----	-------	--------------	----	-----

Microsemi P/N 148-01671-000  
 Mfg P/N: Microsemi M2GL025-1FGG484I  
 Description: IC FPGA IGLOO2 27k Logic  
 Function: FPGA Logic  
 Clearing Process: No erase function. Contains no user data



# Microsemi Frequency & Time Corporation



3870 North First Street  
San Jose, CA 95134  
USA  
(800) 713-4113  
www.microsemi.com

**Note: These devices are installed on the GNSS Receiver Module.**

N/A	RAM	Volatile	Yes	U4
N/A	Flash	Non-Volatile	Yes, configuration	U4

Microsemi P/N 112-00090-000  
Mfg P/N: Ublox LEA-M8F-0  
Description: GNSS Receiver Module  
**Function:** This GNSS receiver has both RAM and flash memory for the receiver to track GNSS signals.

**Clearing Process:** Reset to factory defaults to clear any user configuration information. See instruction in U18 above.

Allow system to run at least 5 minutes after reboot so that it completes the initialization of the GNSS receiver module.

Remove power from unit to clear all information from RAM.

**Note:**  
Some of the above components are noted as N/A for the Memory Size of the U52, U10, U16, U25, U54, U34, U4 and VFD components.  
The memory size field for these devices contains proprietary information from different vendors. Microsemi does not have the details of the memory size for these devices.  
The SyncServer S6XX does not directly access memory in these devices, except it does access registers in the Ethernet PHY devices.

Robert Mengelberg, Robert Mengelberg Compliance Engineer 19 January 2018  
Authorized Signature, Title, Date